GOLD NOTE
il suono italiano

EN

USER MANUAL

B-7 CERAMIC
B-7 CERAMIC X

Thank you for purchasing one of our units and welcome into the Gold Note world, where we turn High-End audio and music into a new experience.

Maurizio Aterini,
founder of Gold Note



IMPORTANT SAFETY INFORMATION

PLEASE NOTE

1. Do not disassemble any part of the product.
2. Do not use any part of the product for other purposes.
3. For service and problems of any kind, contact qualified Gold Note personnel.
4. Protect the product from rain, humidity and keep away from heat sources, electric and electronic motors etc. The power cord supplied must be used only on this unit.
5. Gold Note does not have responsibility for any improper use of this unit.

GENERIC INFORMATION

- Read these instructions and store them.
- Heed all warnings.
- Follow the instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block the ventilation openings and install in accordance with the manufacturer's instructions.
- Do not install near heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarised or grounding-type plug: a polarised plug hastwo blades with one wider than the other.
- A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety.

  If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.

  When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel only. Servicing is required when the apparatus has been damaged in any way (such as when the power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture) and in any case when the apparatus does not operate normally or has been dropped.

This appliance has a serial number located on the rear panel.
Please record the model and serial number and retain them for your records.

MODEL

SERIAL NUMBER

CAUTION!

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer only to qualified Gold Note service personnel for service.

WARNING!

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

GOLD NOTE - Information on the correct management of waste from household Equipment pursuant to the European Directive 2012/19/EU

The crossed-out wheelie bin symbol shown on the equipment or its packaging indicates that the product, at the end of its useful life, must be collected separately from other waste to allow its proper treatment and recycling. The user must therefore deliver, free of charge, the end-of-life equipment to the centres for the separate collection of waste electrical and electronic equipment, or return it to the dealer in accordance with the procedures established by the legislation.
The appropriate separate collection of discarded equipment allows for proper recycling, treatment and environmentally compatible disposal, helping to avoid the possible dispersion of hazardous substances and negative effects on the environment and health, favouring the reuse and/or recycling of the materials of which the equipment is composed of. Illegal dumping of the product by the user involves the application of administrative sanction provided for by the legislation in force. We invite you consult the current legislation and the measures adopted by the public service operating in your country or territory.

| INDEX

UNBOXING	**1**
TECHNICAL SPECIFICATIONS	**2**
TONEARM CALIBRATION	**3**
CARTRIDGE CALIBRATION	**4**
PRODUCT REGISTRATION	**6**

| PACKAGE CONTENT

EN

1x
B-7 CERAMIC/B-7 CERAMIC X

1x
GN STYLUS GAUGE

1x
ANTI-SKATING

1x
USER MANUAL

2x
COUNTERWEIGHTS
| 110g | 28.5g

3x
ALLEN KEYS
| 2.5mm | 2.0mm | 1.5mm

1x
PHONO CABLE

1x
PROTRACTOR/OVERHANG and STROBOSCOPE

| TECHNICAL SPECIFICATIONS

MAIN FEATURES

- 9'' Ball Bearing Tonearm
- Ball bearings:
  Ceramic ball bearings custom-made by GRW
- Overhang:
  19mm
- Offset:
  24°
- Design:
  12mm rectified tube 0.6mm with 6 sections different thickness
- Inserting plinth shaft:
  23mm
- Dynamic effective mass:
  10g
- VTF:
  1.076N (18g)
- VTA:
  Adjustable on collar
- LIFT:
  Hydraulic
- Anti-skating:
  Wire, 5 positions
- Azimuth:
  Adjustable on the head-shell

CABLES

- Internal cables:
  AWG36 Hyper Litz shielded 99,9999% OFC
- External cables supplied:
  1,5m custom 4 pole DIN/RCA

DIMENSIONS AND WEIGHT

Dimensions:
Effective length: 242 mm

Weight:
195g (without counterweight)

FINISHES

- B-7 Ceramic - Shell and pivot:
  Black anodised Aluminium
- B-7 Ceramic X - Shell and pivot:
  Magnesium
- Arm wand B-7 Ceramic:
  Titanium
- Counterweight:
  Stainless Steel natural
- Hydraulic lift board:
  Black

| TONEARM CALIBRATION

EN

ANTI-SKATING AND COUNTERWEIGHT

1 Anti-skating: Nylon wire with bullet counterweight.

2 Anti-skating: Adjustment bar.

3 Tonearm counterweight: to set up the correct tracking force depending on the phono cartridge in use.

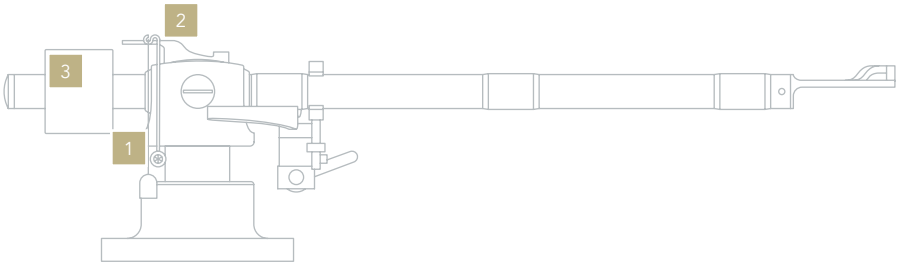

INSTALLING THE ANTI-SKATING SYSTEM

1 Slip the loop of the ANTI-SKATING nylon wire over the groove of the ADJUSTMENT BAR.

2 Feed the wire through the loop of the SUPPORT HOOP.

3 Adjust the ANTI-SKATING force choosing the correct groove on the ADJUSTMENT BAR.

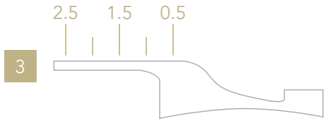

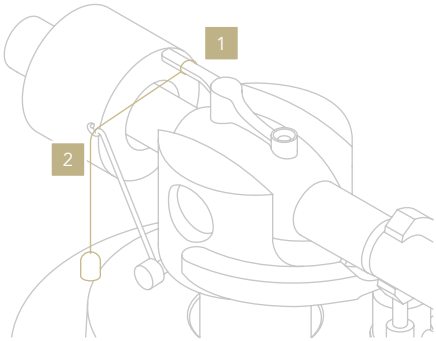

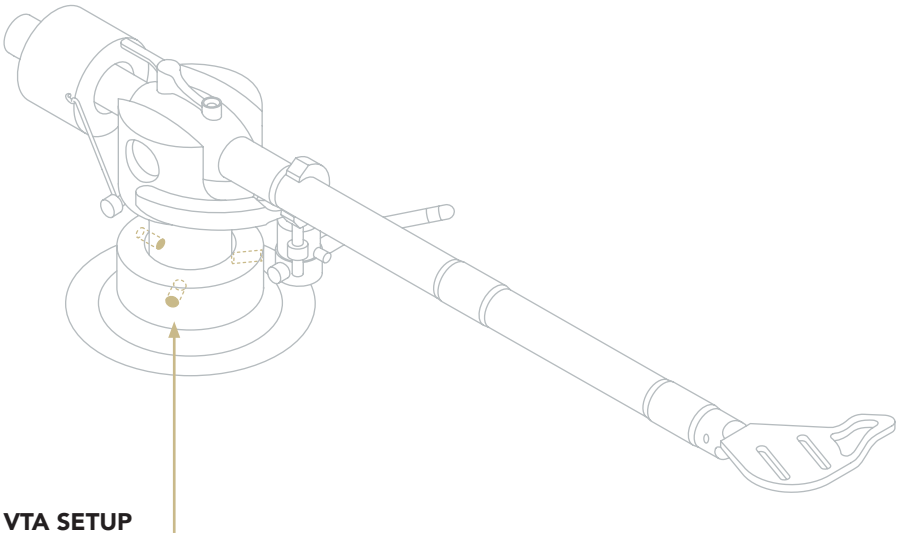

VTA SETUP

Use the 1.5mm Allen key supplied to adjust the VTA. Before moving the tonearm, loosen the hex bolts found in the tonearm collar. We recommend to loosen one hex bolt at a time (usually loosening one is enough to adjust the VTA).

| POWER ADAPTER

CONNECTING THE POWER SUPPLY ADAPTER

Before plugging the power adapter in to the AC make sure the connector is plugged into the turntable.

PLEASE NOTE
Use only the original power adapter to power the turntable to ensure the correct functioning.

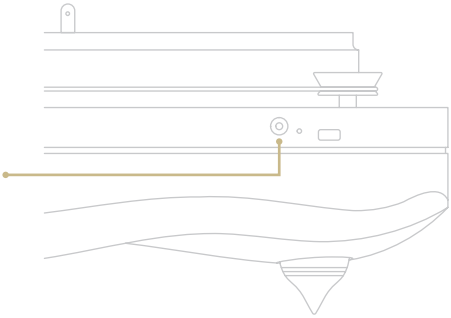

| CARTRIDGE CALIBRATION

Our turntables and tone arms are always pre-calibrated at our factory but you can use the GN Calibration tool to adjust the:

A Phono Cartridge alignment.

B Overhang.

C 45rpm and 33¹/₃rpm speed (requires a strobe light).

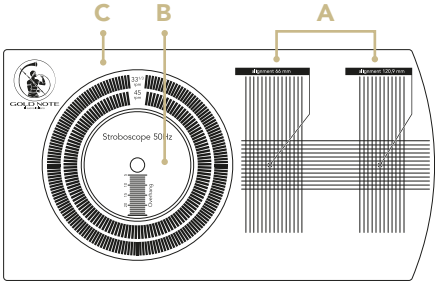

SPEED ADJUSTMENTS

Check the speed with the help of a strobe light while the platter is spinning.

The outer line is to check the 33¹/₃ rpm.

The inner line is to check the 45rpm.

OVERHANG

To set the correct overhang the Calibration Tool must be inserted on to the turntable record pin and the cartridge Tip must be positioned on top of the pin.

Adjust the position of the cartridge until the overhang of the phono cartridge matches the manufacturer's specifications.

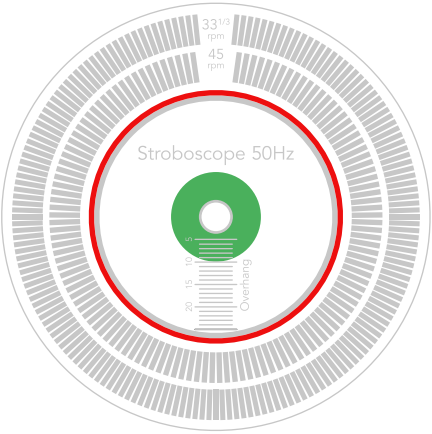

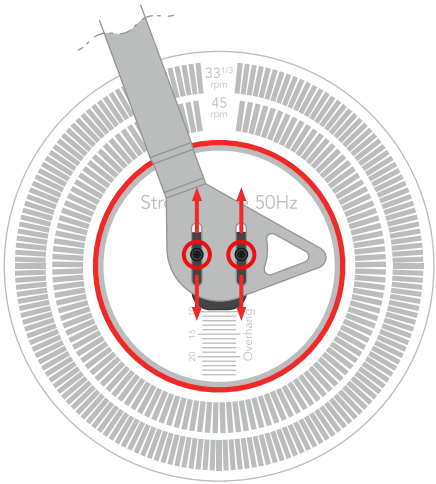

ALIGNMENT

To correctly align the phono cartridge and achieve the best tracking position, point the tip of the phono cartridge into the circles as in the picture below.

The body of the phono cartridge must be aligned to the vertical lines.

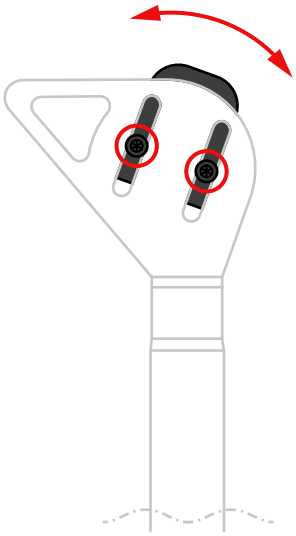

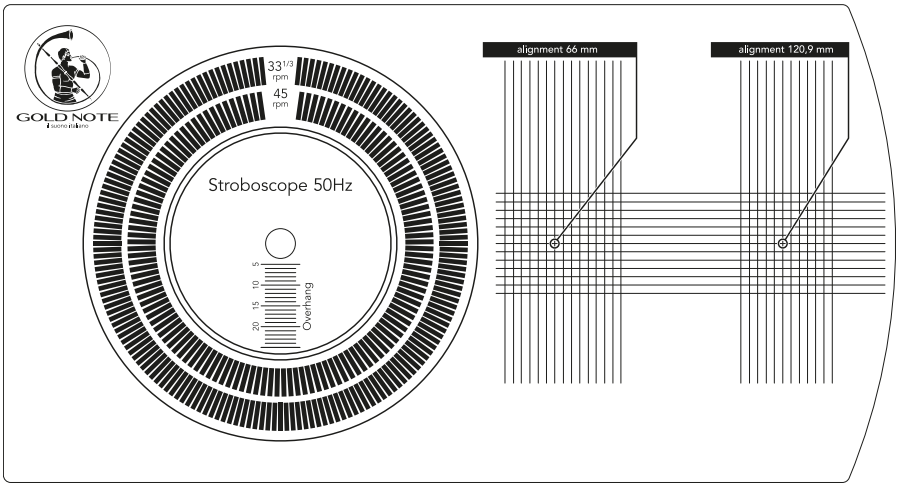

| PRODUCT REGISTRATION

PRODUCT REGISTRATION

We recommend to register the unit on our internet website within 15 days from the purchase at
www.goldnote.it/product-registration

If the unit is not registered correctly or has been purchased from a different country of the purchaser home address the unit will not be covered by any warranty and the registration will be refused.

Please note that the warranty does not cover in any case: Tubes, Phono Cartridge Stylus and Batteries.

www.goldnote.it/*product-registration*

WARNING

Gold Note products should only be opened, serviced and inspected by certified Gold Note technicians and dealers. Work performed by unqualified personnel may cause serious damage or personal injury. Opening of the product by non-authorised personnel will void the guarantee.

In this case, contact your dealer to be advised on how the fault can be solved.

Do not return any object directly to the factory or to the distributor without being authorised to do so.

WARRANTY

All Gold Note products come with a warranty against defective materials and workmanship.
Any service and inspection must be carried out by a Gold Note dealer or distributor so in case you need any assistance with this product, please contact the seller.

PLEASE NOTE

Descriptions and technical characteristics may vary at any time and without notice.

GOLD NOTE
il suono italiano

Designed and handmade in Firenze, Italy
www.goldnote.it
Akamai S.r.l. All rights reserved